

Brakecheck Printing Options

For units with Firmware Version 1.0.51 or higher

On the Brakecheck under current mode, there is a mode called setup and a LED to show when it is selected.

Before the update this option could not be selected.

The update (FW-1.0.51) now allows us to enter the setup to change the settings of the printer between no I/R, Slow I/R and Fast rate I/R.

To change the settings on the brakecheck without connection to the pc:

1. Power on Brakecheck - Hold Menu
2. Hit Menu until current mode is on SETUP (see manual) – After CLR Appears
3. Hit enter and unit will show PRT
4. Hit enter again, unit will show OFF
5. This is where you select the preferred printing method
6. The Menu button changes the printing method (i.e OFF, no1 and no2)
7. Once the unit shows the preferred method Hit Enter to select that method
8. The unit then shows Sbr and the print method has changed to your selection.

Kane printers need selection No1 for all the information to be printed

Martel printers are capable of faster rate I/R so use selection No2

Off = Serial Printing Only – Disables I/R if needed

No1 = Slow rate I/R – Standard Speed – Kane Printers have to be set to NO1

No2 = Fast rate I/R – Quicker Rate of Transfer – Martel or I/R2 Receiver.